

Electroplating metal

HITACHI
Inspire the Next

CMI243®

Accurate measurement of electroplating and galvanizing for plated metals over ferrous substrates

Find out more

These gauges are a great complement to our XRF coatings analyzers. To place your order contact@hitachi-hightech.com

MORE INFORMATION

To find out more about the CMI243® or our range of electroplating and metal gauges, visit

www.hitachi-hightech.com/hha



ADVANCED METALLIC COATING MEASUREMENT

The CMI243® is an essential tool for any metal finisher. It has a flexible and easy-to-use design with the ECP-m probe which uses phase-sensitive eddy current technology.

With the CMI243® using the ECP-m probe it is possible to accurately measure metallic coatings over ferrous substrates - even on small, odd-shaped or rough surfaces.

This gauge is ideal for use on fasteners and transportation components, featuring user-friendly controls and performance that is comparable to X-ray fluorescence (XRF) instruments.

For added value, the CMI243® can be expanded with a magnetic induction probe for measuring paint and other coatings on magnetic substrates.

KEY FEATURES:

- | Battery operated.
- | Eddy current technology.
- | Reliable and accurate.

**HIGHLY ACCURATE
COMPLEMENT
TO XRF**

We have been providing coating thickness products for the electroplating industry for over 45 years.

PHASE-SENSITIVE EDDY CURRENT TECHNOLOGY

More reliable than conventional eddy current and magnetic induction gauges, especially for small parts or parts with complex geometry. Accuracy within $\pm 1\%$ (with reference to standards) and precision within 0.3%.

ADVANCED ECP-m PROBE


Our ECP-m probe was designed specifically for difficult metallic coating applications. This probe can measure metallic coatings, such as zinc, nickel, copper, chrome or cadmium on ferrous substrates. Its tip provides easy measurement of small, odd-shaped or rough components.

PACKAGE CONSISTS OF:

- ECP-m Probe with guide.
- Zinc calibration standards.
- Optional: SMP-1 (magnetic probe) can be purchased separately.
- Accuracy: $\pm 1\%$ with respect to reference standards.

- Precision:** 0.3%.
- Resolution:** 0.01 mils (0.1 μm).
- Eddy Current:** Conforms to methods DIN 50984, BS5411 Part 3, ISO 2360, ISO 21968, ASTM B499, and ASTM E376.
- Memory Capacity:** 26,500 readings.
- Dimensions:** in: 5 7/8 (L) x 3 1/8 (W) x 1 3/16 (D).
cm: 14.9 (L) x 7.94 (W) x 3.02 (D).
- Weight:** 9 oz. (0.26 kg) including battery.
- Units:** Automatic conversion between imperial and metric with a keystroke.
- Display:** Three digit LCD display, 1/2" (1.27 cm) character height.
- Battery:** 9 V Alkaline (65 hrs).

Minimum Radius on Cylinder Convex (r1) Concave (r2)	Working Height (H)	Min Measurement Area (D)	Min. Base Thickness (mils)
0.045" (1.143 mm) 0.135" (3.429 mm)	4.0" (10.16 cm)	0.090" (2.286 mm)	12 (0.3 mm)

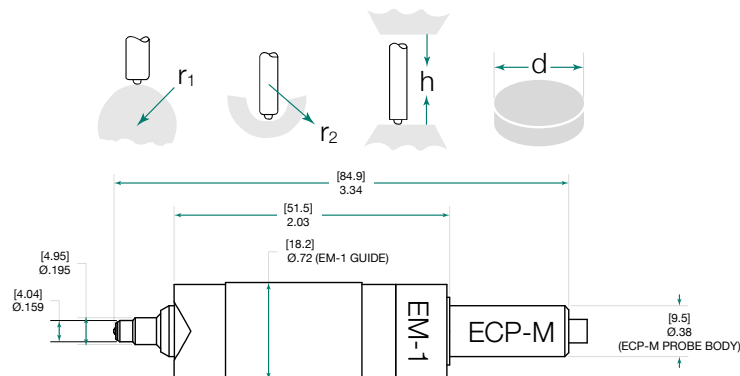

Operating Ranges:

Plating/Fe	Thickness Range	Probe
Zn	0.1–1.5 mil (38 μm)	ECP-m
Cd	0.1–1.5 mil (38 μm)	ECP-m
Cr	0.1–1.5 mil (38 μm)	ECP-m
Ni	0.1–1.5 mil (38 μm)	ECP-m
Cu	0.1–0.40 mil (10 μm)	ECP-m
Non-Mag/Fe	0.1–50 mil (1270 μm)	SMP-1

Our global network of service hubs offer a full range of technical support to keep you up and running. We are A2LA certified* for coating thickness calibrations and standards which ensures that your CMI243® will be compliant at audit to ISO 17025.



*A2LA accreditation is applicable to work performed by Hitachi High-Tech Analytical Science America, Inc.

If you'd like to learn more about the CMI243® gauge visit www.hitachi-hightech.com/hha or email one of our experts at contact@hitachi-hightech.com to book a demo.

Hitachi High-Tech Analytical Science

This publication is the copyright of Hitachi High-Tech Analytical Science and provides outline information only, which (unless agreed by the company in writing) may not be used, applied or reproduced for any purpose or form part of any order or contract or regarded as the representation relating to the products or services concerned. Hitachi High-Tech Analytical Science's policy is one of continued improvement. The company reserves the right to alter, without notice the specification, design or conditions of supply of any product or service.

Hitachi High-Tech Analytical Science acknowledges all trademarks and registrations.

© Hitachi High-Tech Analytical Science, 2020. All rights reserved.

Part number: OIIA/243B/0413

